


TE 90

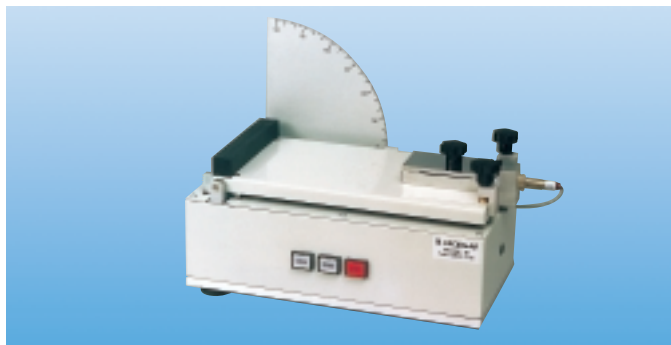

Friction tester

Per la determinazione del grado di scivolosità, come da norme TAPPI T815.

DATI TECNICI:

Piano inclinabile da	0° – 60°
Precisione di lettura	0,5°
Dimensioni piano inclinabile	150 x 300 mm
Blocchetto mobile	50 x 100 mm
Peso blocchetto mobile	750 gr ± 5 gr
Velocità di inclinazione	1,5° ± 0,1°/sec
Arresto automatico al distacco del blocchetto mobile dalla posizione di partenza.	
Pulsanti di	Marcia - Stop - Ritorno a 0°
Lettura su goniometro	da 0° – 90°
Alimentazione	230 volt monofase

Friction tester

Instrument for determining the angle of static friction according to TAPPI T 815 standard.

TECHNICAL DATA:

Plate tilting	from 0° to 60°
Reading accuracy	0.5°
Tilting plate size	150 x 300 mm
Movable block size	50 x 100 mm
Movable block weight	750 g ± 5 g
Tilting speed	1.5° ± 0.1°/sec
Automatic stop when movable block starts moving, breaking away from start position.	
Push-buttons for	Stop - Start - Return to 0°
Reading on goniometer	from 0° to 90°
Power supply	230 V – single phase